

 
 
 
 

 


 




DANCOVER[®]



 
 
 

Manual Party tent 3m Series PVC

 
30-01-2015-SH

Part list for 3m PVC Party Tent

 
Part No.			6m	8m	10m
1		1410mm	8	10	12
2		1940mm	9	12	15
4		1880mm	8	10	12
6		110°	4	4	4
7		110°	4	6	8
8		140°	2	2	2
9		140°	2	3	4
10			8	10	12
11			36	42	48
12			84	102	120
14			42	54	66
15			4	4	4
16			1	1	1

 
 
Part list for 3m PVC Party Tent

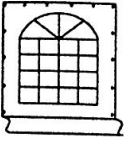Part No.		6m	8m	10m
17		6	8	10
18		1	1	1
19		1	1	1
20		4	4	4

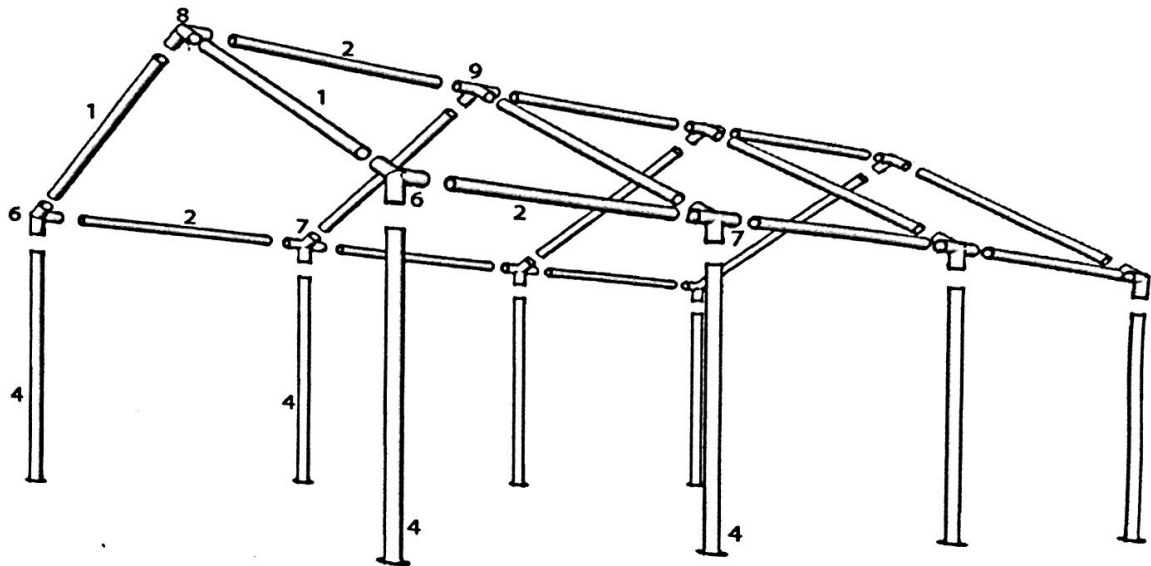 


A

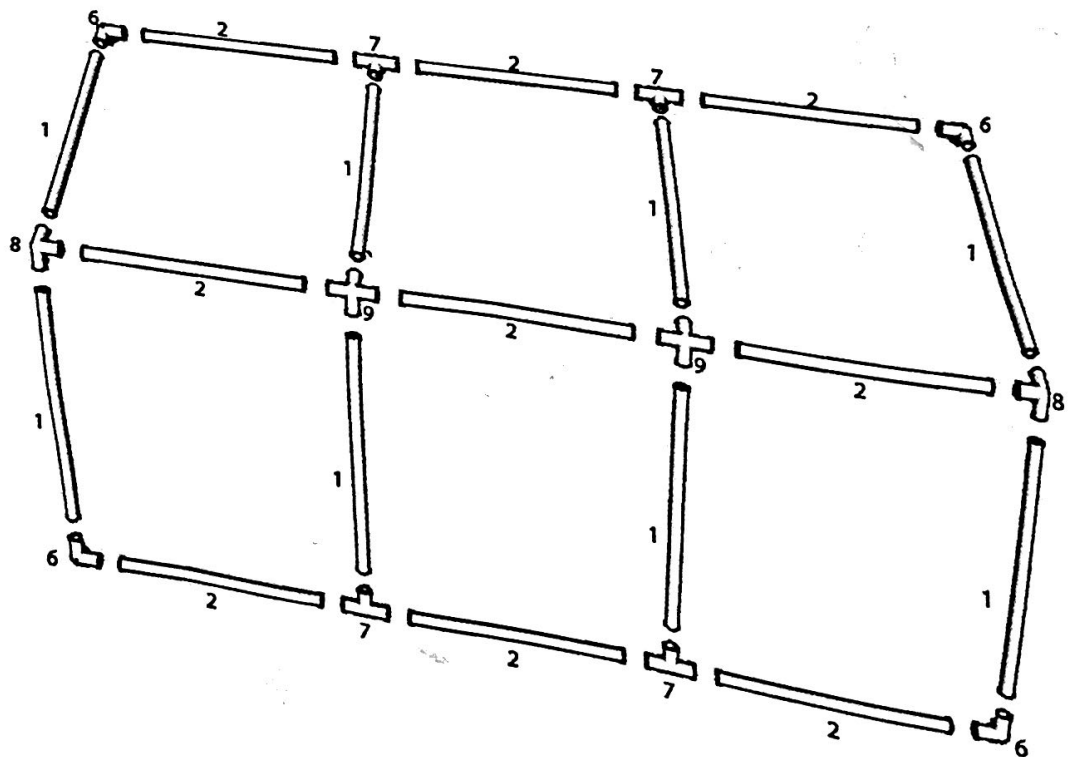 


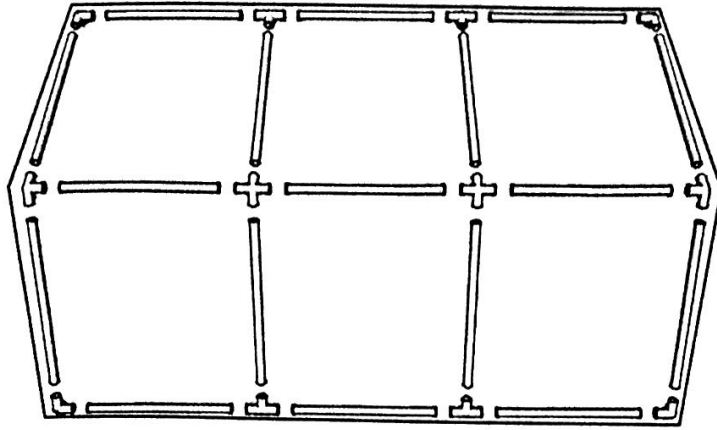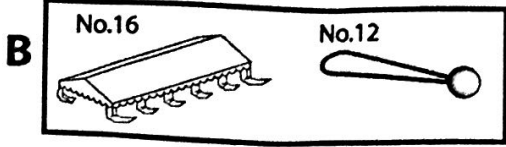

C

 
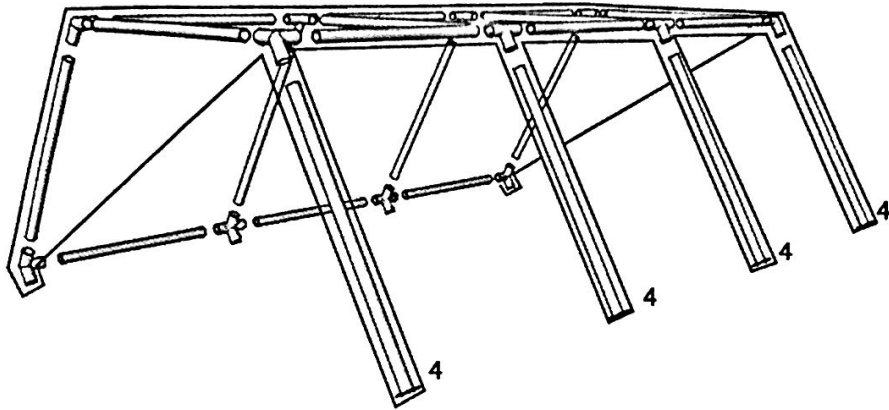 


D

 
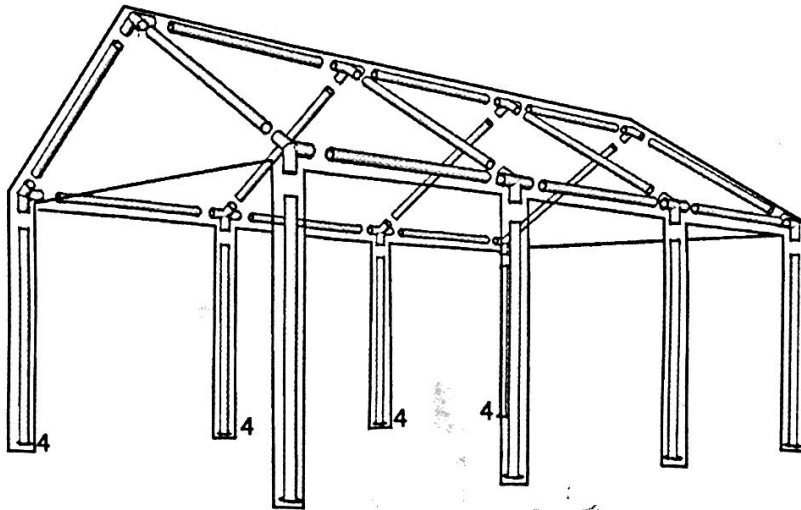 


DANCOVER.

E

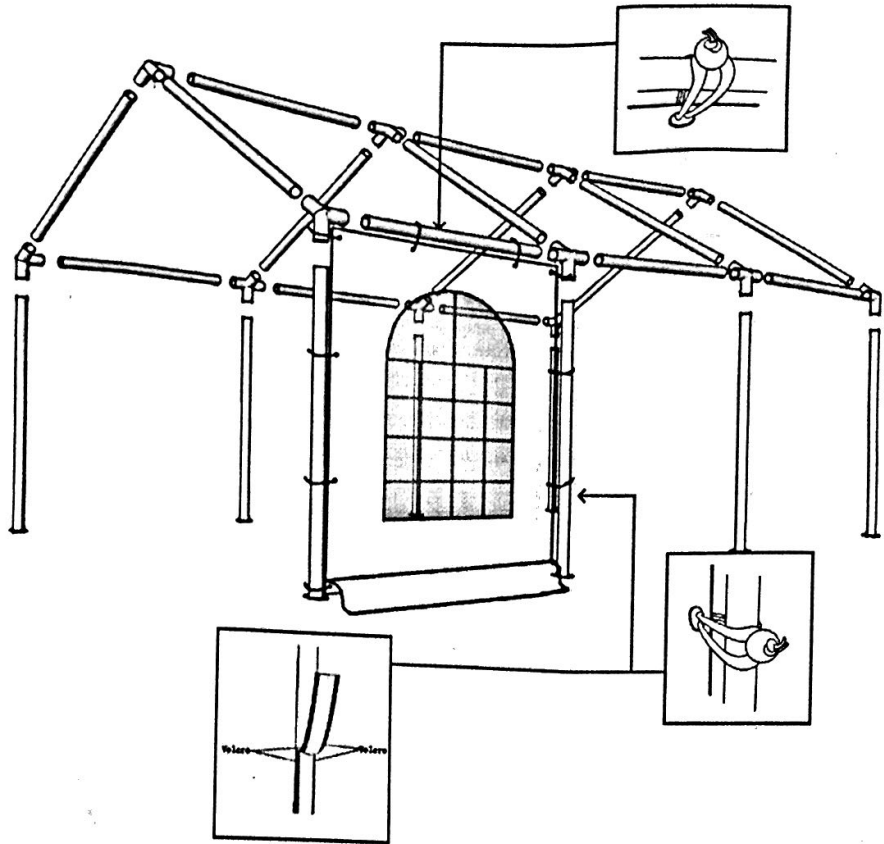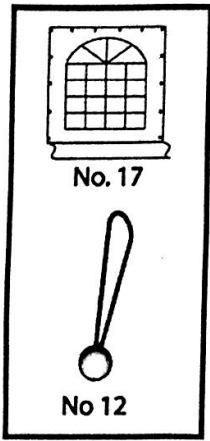

F

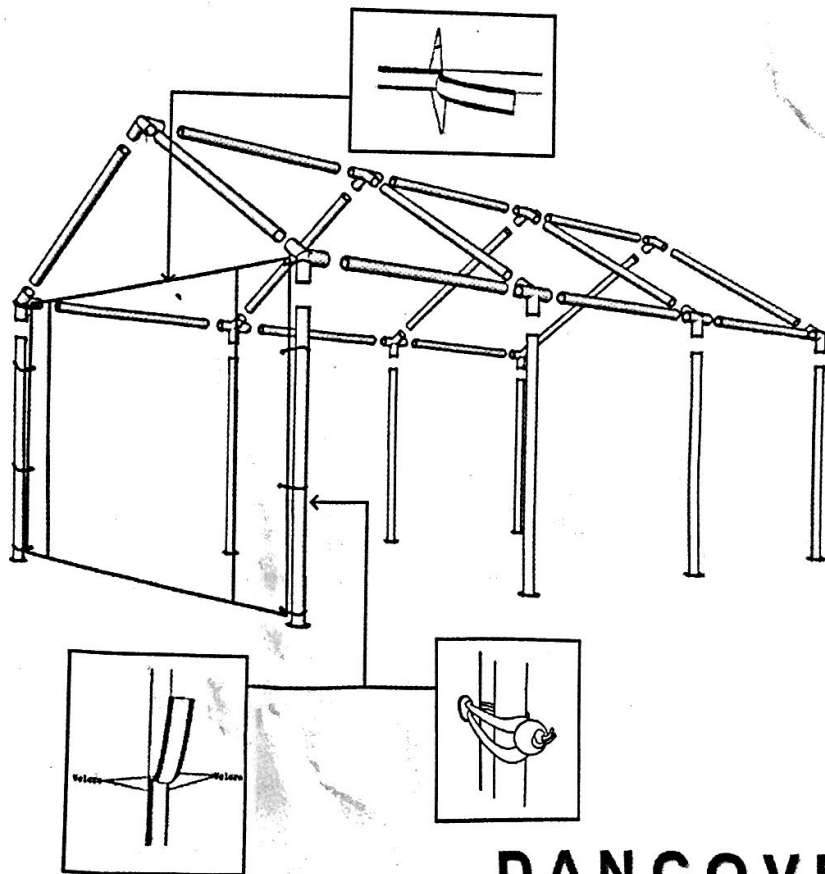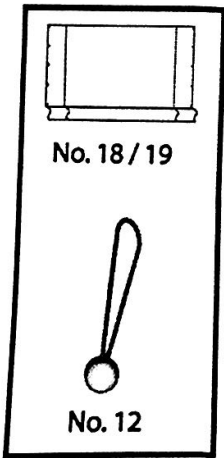

DANCOVER®